


Dijeljenje printera s Windowsa 10 na računala s Windowsima XP




Windowsi XP se još koriste u tvrtkama, pa i akademskom i školskom okruženju. Na sistemcima i svima koji održavaju takva računala i mreže je da nekako usklade stare operativne sustave s novima. Jedan od problema koji se može pojaviti je dijeljenje printera koji je priključen na Windows 10 računalo, a "klijent" je stari Windows XP.

Instalacija dijeljenog printera na Win 10 je standardna: spojili ste printer, dodijelili mu ime i dodali korisnike koji imaju pravo tiskanja na tom printeru. Sljedeći korak je na starom Win XP-u, gdje želite dodati isti printer, što je najjednostavnije učiniti putem Explorera. Upisivanjem UNC putanje doći ćete do printera i dvoklikom preuzeti instalaciju (i sam printer).

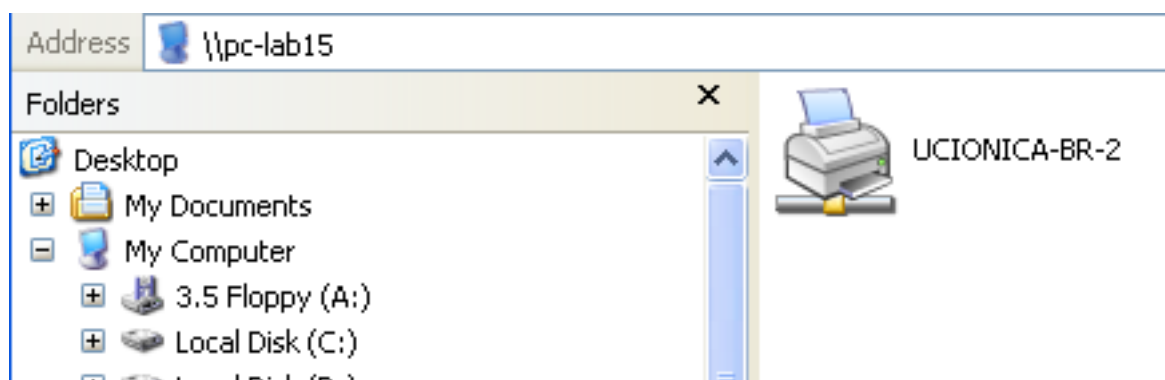


No, klikom na printer dobijete poruku:

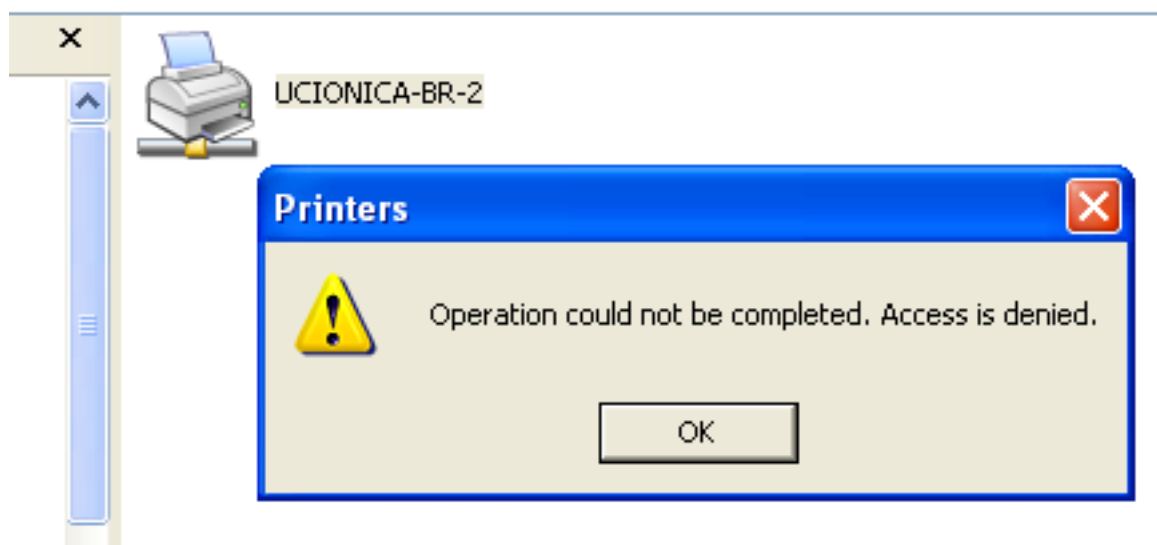

Budući da ste već dodali korisnike i dodijelili ovlasti, poruka je malo čudna i na prvi trenutak zbunjujuća.

Ono što Vam preostaje je dodavanje na klasičan način, putem "Add Printers".

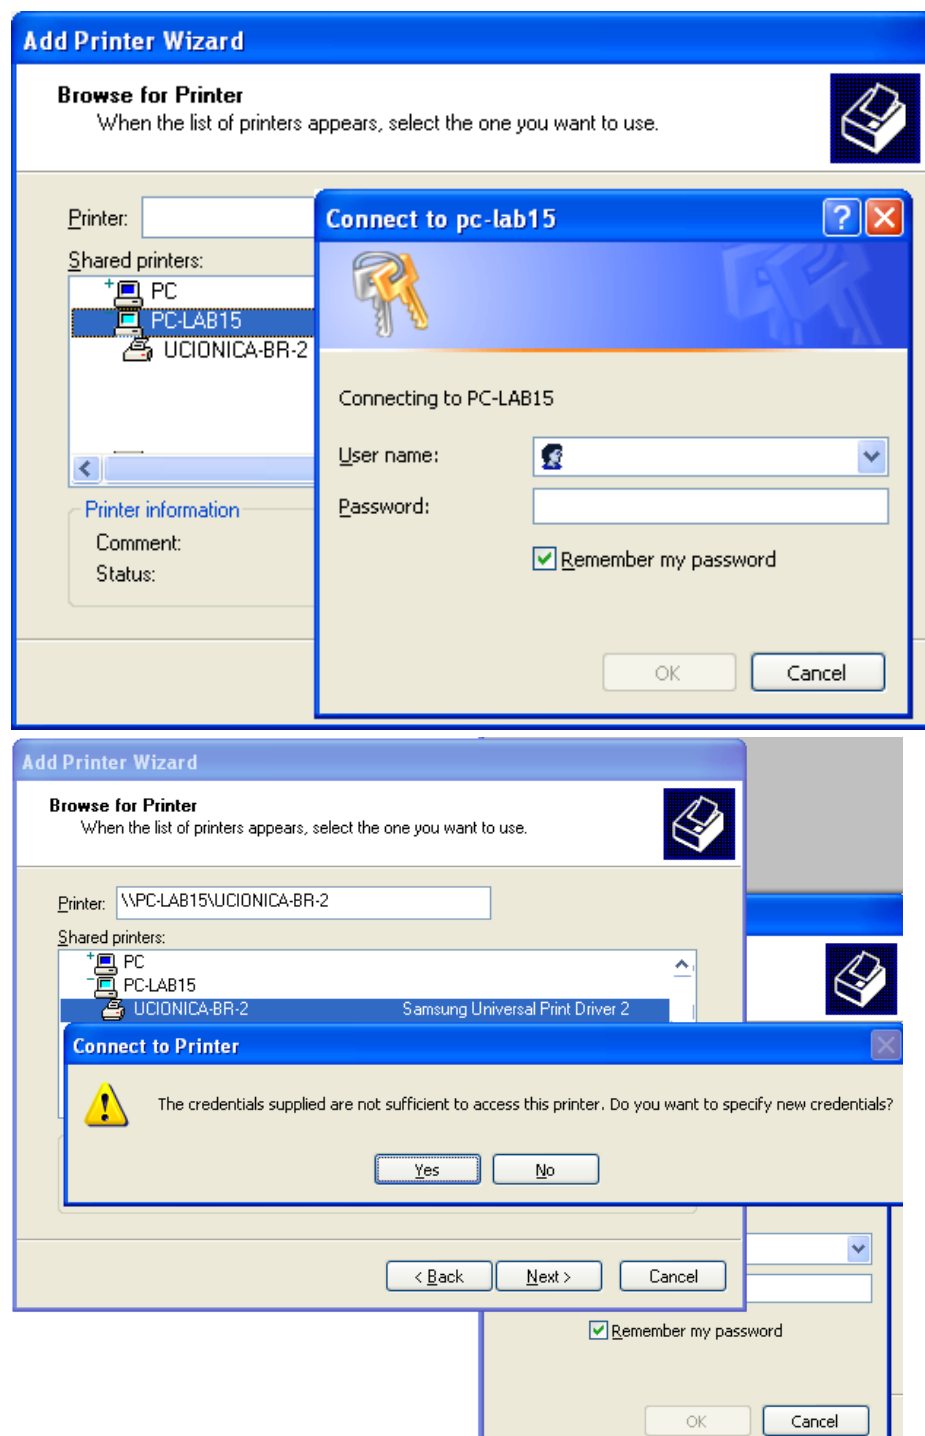

No ovaj način traži User Name i Password, a nakon što upišete korisničke podatke dobijete novo upozorenje:

"The credentials supplied are not sufficient to access this printer. Do you want to specify new credentials?"


Zašto se pojavila ova poruka, i što treba dalje učiniti? Čini se razlog leži u samom upravljačkom programu i Windows 10 operativnom sustavu, odnosno promjenama u sigurnosim postavkama i načinu rada sa dijeljenim printerima (pogledati pod Advanced Sharing).


Ovdje ćemo opisati ono što nas zanima: brzo rješenje. Ono je u pravilu vrlo jednostavno i u svega nekoliko klikova možete spojiti printer na Windows XP.

U Windows XP startajte "Control Panel" i "Printers and Faxes".


Na lijevoj strani kliknite na Add a Printer, u wizardu odaberite "Local printer attached to this computer"

U sljedećem prozoru odaberite "Create a new port" i s padajuće liste odaberite "Local Port".

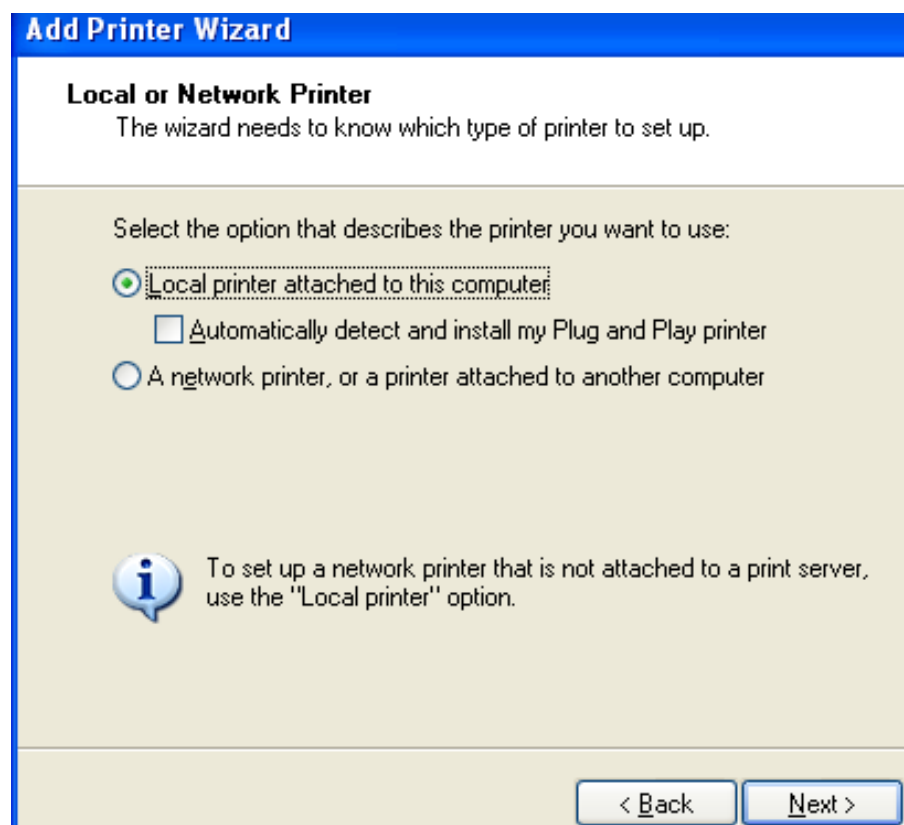

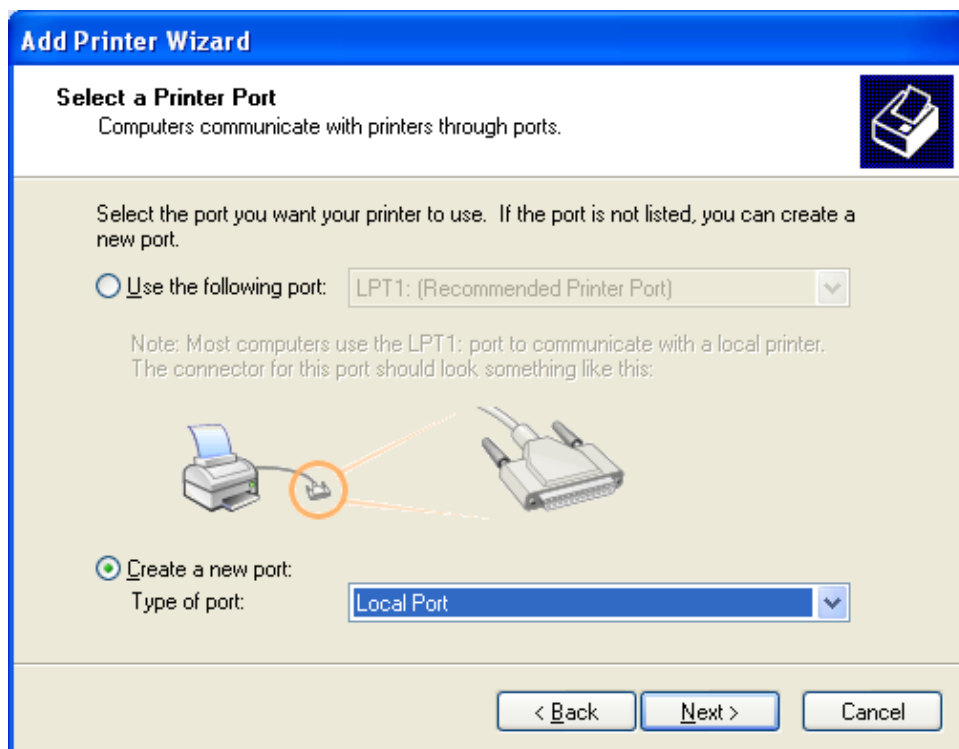

Potvrdite "Next", u novom dijaloškom okviru za "Port Name" trebate upisati ime računala (ili IP adresu po UNC-u) i naziv dijeljenog printera (primjer: [\\192.168.1.52\ucionica-br-2](#)).

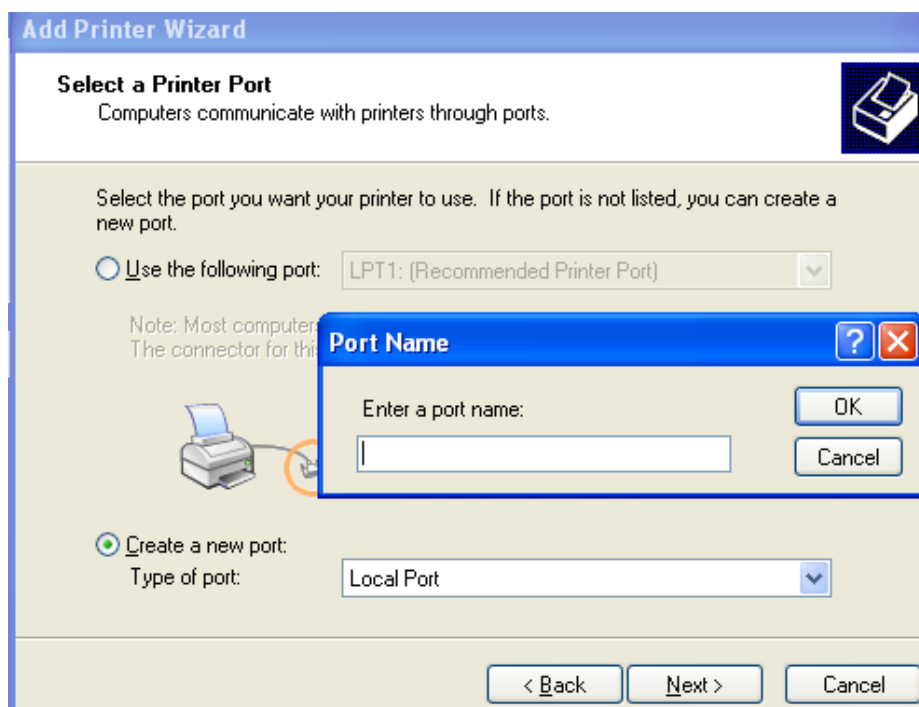

Add Printer Wizard

Select a Printer Port
Computers communicate with printers through ports.

Select the port you want your printer to use. If the port is not listed, you can create a new port.

☐ Use the following port: LPT1: (Recommended Printer Port)

Note: Most computers use the USB connector for this type of printer.

Port Name

Enter a port name:

\\192.168.1.52\UCIONICA-BR-2

OK Cancel

Slijedite daljnje upute, odaberite ispravan driver, upišite ime printera, odaberite "Do not share this printer".

Add Printer Wizard

Install Printer Software
The manufacturer and model determine which printer software to use.

Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for compatible printer software.

Manufacturer: Samsung

Printers: Samsung SI-630A, Samsung ML-2150 Series, Samsung M332x 382x 402x Series, Samsung ML-1660 Series

This driver is digitally signed. [Tell me why driver signing is important](#)

Windows Update Have Disk...

< Back Next > Cancel

Add Printer Wizard

Name Your Printer
You must assign a name to this printer.

Type a name for this printer. Because some programs do not support name combinations of more than 31 characters, it is best to keep the name as short as possible.

Printer name: Samsung ML-1660 Series

Do you want to use this printer as the default printer?

☐ Yes

☒ No

Add Printer Wizard

Printer Sharing
You can share this printer with other network users.

If you want to share this printer, you must provide a share name. You can use the suggested name or type a new one. The share name will be visible to other network users.

☒ Do not share this printer

☐ Share name:

Otiskajte testnu stranicu, nakon testne stranice dobije poruku da je instalacija uspješno završena i to je to.

Add Printer Wizard

Print Test Page
To confirm that the printer is installed properly, you

Do you want to print a test page?

☒ Yes

☐ No

Add Printer Wizard



Completing the Add Printer Wizard

You have successfully completed the Add Printer Wizard.
You specified the following printer settings:

Name:	Samsung ML-1660 Series
Share name:	<Not Shared>
Port:	\\192.168.1.52\ucionica-br-2
Model:	Samsung ML-1660 Series
Default:	No
Test page:	No

Zdravko Rašić

sri, 2015-09-30 09:53 - Zdravko RašićKuharice: [Windows](#) [1]

Kategorije: [Operacijski sustavi](#) [2]

Vote: 0

No votes yet

Source URL: <https://sysportal.carnet.hr/node/1569>

Links

- [1] <https://sysportal.carnet.hr/taxonomy/term/18>
- [2] <https://sysportal.carnet.hr/taxonomy/term/26>